

ToneWorks PXR4

Using the SmartMedia card for your own recordings.

1. Turn the PXR4 upside down so that you can read "KORG PANDORA" on the back.



2. Pull the flap on the right (and then lift



3. Turn the PXR4 over so this it is now face up. You will now see picture of the SmartMedia card and the words "PUSH TO EJECT" written on the flap.



4. Gently push in the SmartMedia card and it will spring out far enough for you to grab and remove it. Be careful to hold it by the edges since it is very fragile.

Notice that the shiny gold circuit board is up, as shown below.



6. If there is a small silver circular disk next to the 16MB writing, scrape it off (gently) with your finger nail. This is the write-protection tab that keeps all recording from being erased. If there is no disk you can proceed to step 7 to erase any songs on the disk.

7. To erase a song on the PXR4 make sure that the SmartMedia card is properly reinstalled and the unit is on (AC or battery).

Go to the Song you wish to delete by pressing the REWIND or FAST FORWARD buttons.

1. Press the SYSTEM/RHYTHM button 2 times; "EditSong" will be displayed.
2. Press the Right CURSOR key; "NameSong" will be displayed.
3. Press the Down CURSOR key; "DelSong" will be displayed.
4. Press the Right CURSOR key; "DestSong" will be displayed.
5. Press the Right CURSOR key, "DEL OK?" will be displayed and YES will blink. (If you press the Left CURSOR key, you can go back to the previous page)
6. Press the Right CURSOR key, the display will indicate "Sure" and no will blink.
7. Turn the dial one Right click, the screen will display a blinking "YES".
8. Press the Right CURSOR key, the song will be deleted and the display will indicate, "Finish!"